


REMOTE CONTROL FUNCTION

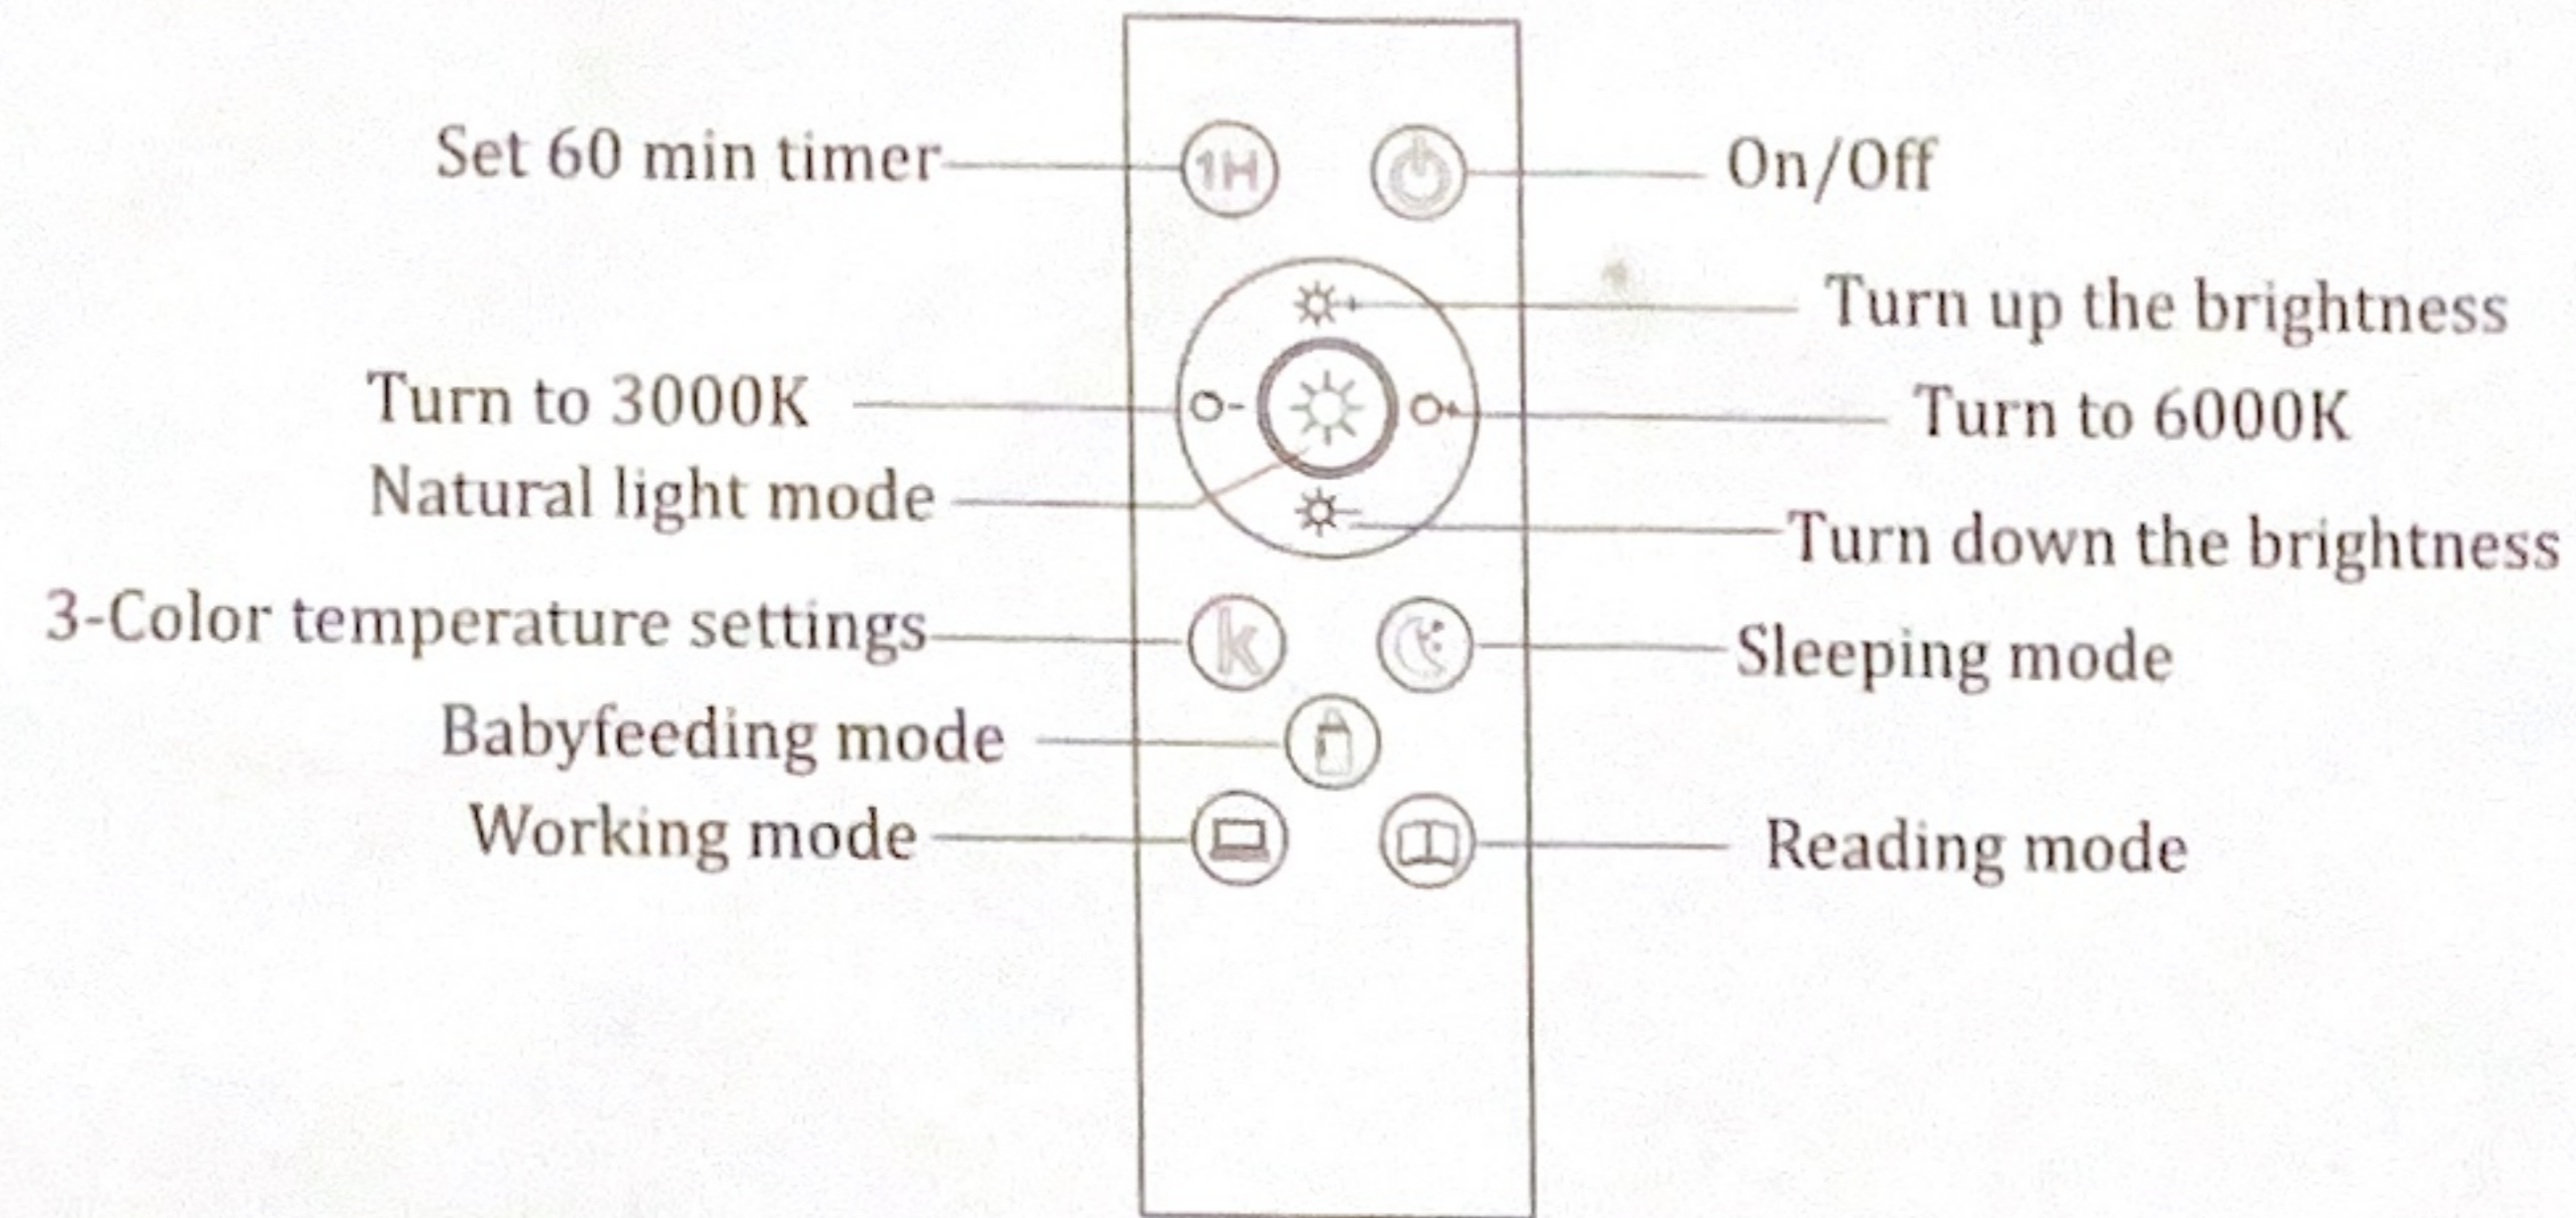

TROUBLE SHOOTING

1. If your floor lamp is not working, make sure the plug is securely inserted and 2 batteries are installed in the remote control. Press the foot switch and on/off button on the remote control.
2. If you are unable to control the light bulb with the remote control, please try reconnecting the remote according to the following steps: After the light bulb is turned on, press and hold the on/off button on the remote for 3 seconds until the light bulb flashes.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

USER GUIDE

